


Vantage PRO2™ INSTALLATION DIAGRAM

Anemometer Transmitter Kit


This diagram shows an Integrated Sensor Suite and an Anemometer Transmitter Kit wirelessly connected to a Vantage Pro2™ Console.

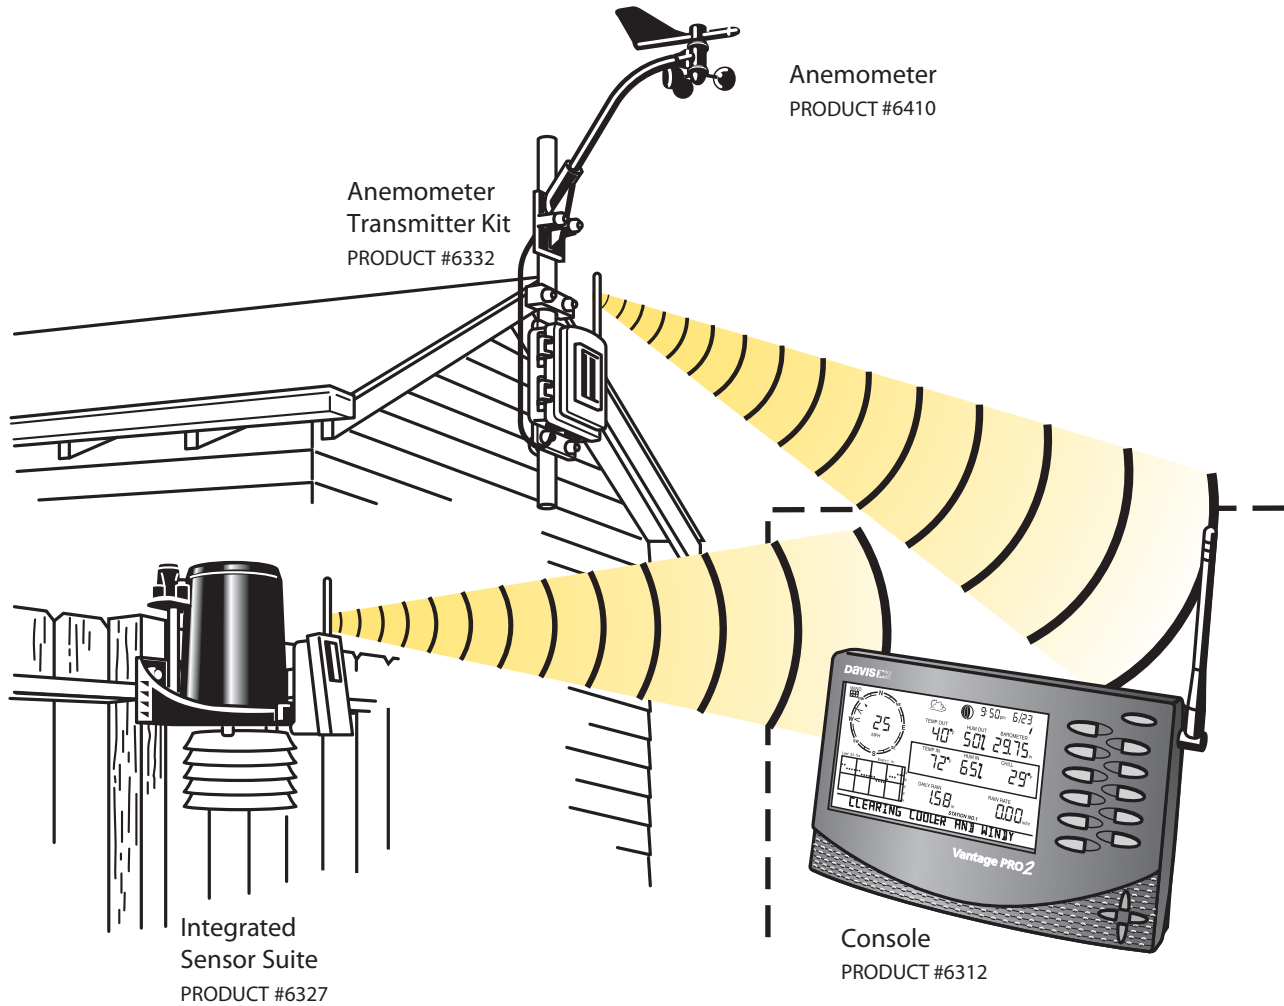

Vantage PRO2™ INSTALLATION DIAGRAM

Cabled Vantage Pro2™ with Remote Anemometer

This diagram shows an Integrated Sensor Suite (ISS), with a remote anemometer, connected to a Vantage Pro2 Console via a cable connection. A cabled Vantage Pro2 system (#6152C) allows for a cable connection of up to 100' (30 m). This connection can be extended up to 1000' (300 m) with optional extension cables. Please note that in a cabled system, the Vantage Pro2 Console cannot receive any station except a cabled ISS or cabled ISS Plus.

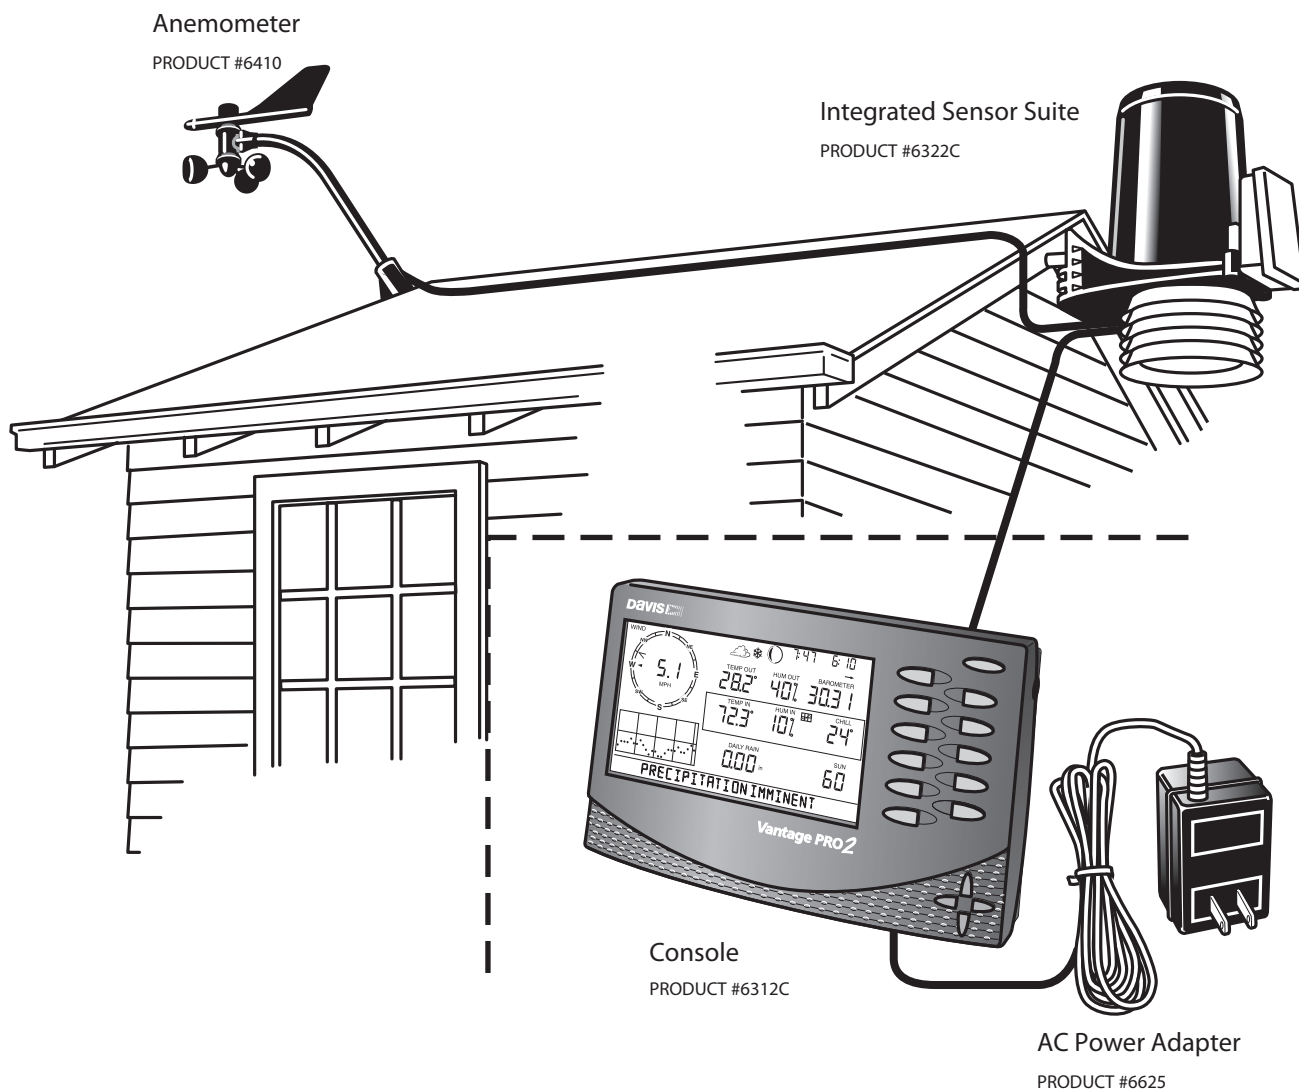

Vantage PRO2™ INSTALLATION DIAGRAM

Vantage Pro2™ Console Receiving Data from up to 8 Different Transmitting Stations

This diagram demonstrates how each Vantage Pro2 Console can receive data from up to eight different transmitting stations.

