


# Vantage PRO2™ INSTALLATION DIAGRAM

## Connecting a Wireless Weather Envoy™ to a Computer via WeatherLink®


This diagram shows a Wireless Weather Envoy and a WeatherLink Data Logger connected to a computer via a USB Data Logger cable.

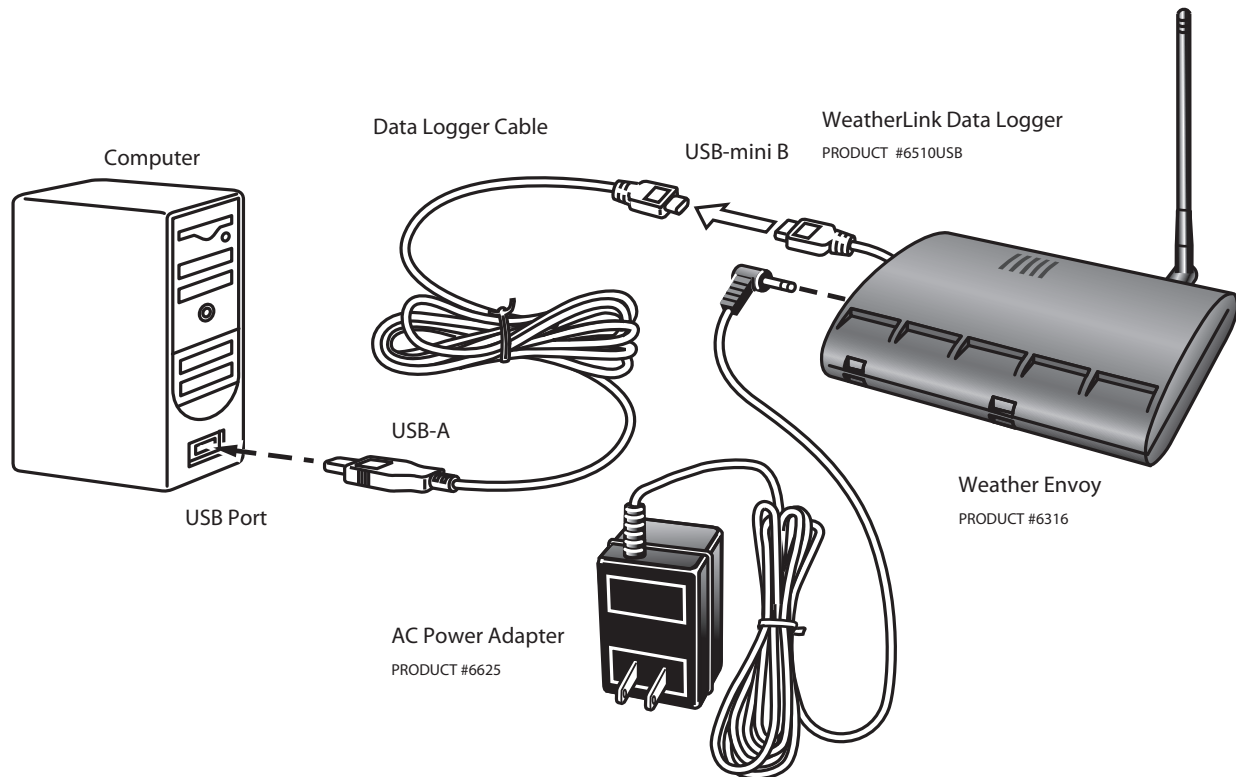

# Vantage PRO<sup>2</sup>™ INSTALLATION DIAGRAM

## Weather Envoy with a Wireless Field Station

This diagram shows a wireless field station with solar power and soil moisture sensor. The field station shown is comprised of a Wireless Weather Envoy receiving wireless data from from an Integrated Sensor Suite and a Leaf and Soil Moisture/Temperature Station.

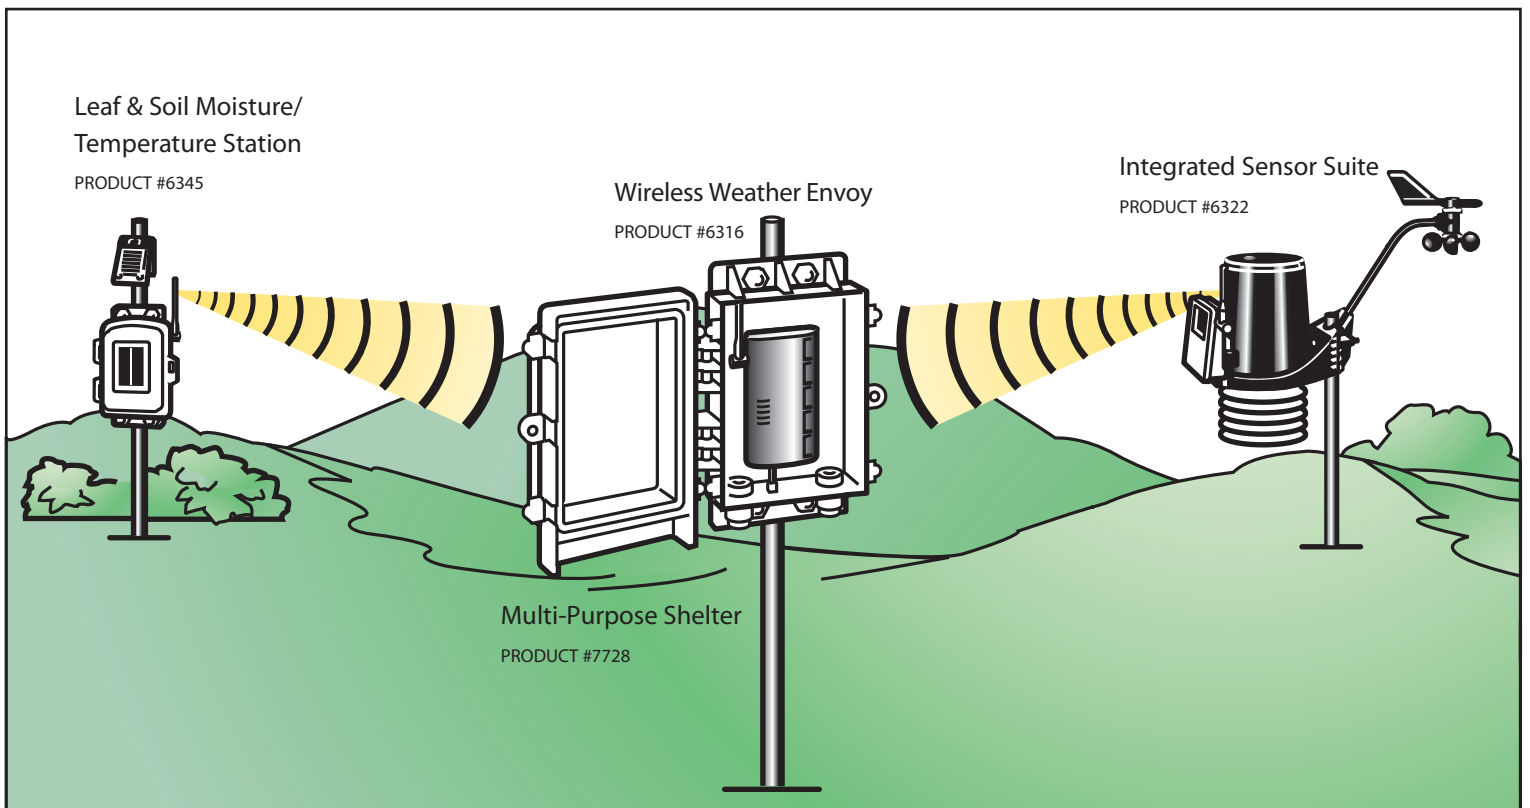

# Vantage PRO2™ INSTALLATION DIAGRAM

## Wireless Vantage Pro2™ System (Envoy with Integrated Sensor Suite)

This diagram shows an Integrated Sensor Suite wirelessly connected to a Weather Envoy™, which is connected to a computer. The transmission distance between an Integrated Sensor Suite and an Envoy is up to 1000' line of sight, or up to 600' through walls and other obstructions. The cable distance between an Envoy and a computer is 8' using a USB connection.

